

# Troubleshooting checklist

[www.sea.siemens.com/afci](http://www.sea.siemens.com/afci) • 1-800-964-4114

**Answers for infrastructure.**

**SIEMENS**

Turn AFCI to "ON" position. Observe LED indications and compare to chart below:

## 1-Pole Combination Type AFCI

LED indicator		Last known trip condition
Yellow 1	Yellow 2	
OFF	OFF	Overcurrent
ON	OFF	Arc fault
ON	ON	Arc fault to ground

See reverse side for further details.

## 2-Pole Combination Type AFCI

LED indicator			Last known trip condition
Yellow 1	Yellow 2	Yellow 3	
OFF	OFF	OFF	Overcurrent
ON	OFF	OFF	Arc fault (Leg A)
OFF	OFF	ON	Arc fault (Leg B)
ON	ON	ON	Arc fault to ground

**For both 1 and 2-pole breakers,** LED indications will appear for 5 seconds each time the AFCI is turned "ON" and will display each time breaker is reset up to 30 days after the last trip.

The last known trip condition can be cleared by the following process:

1. Turn the AFCI to the "OFF" position.
2. Press and hold PTT button(s).
3. Turn the AFCI to the "ON" position.
4. Release PTT button(s) within 3 seconds.